


General Operation

1. A fully charged battery should give you minimum 1500 cycles (buzzer/light activations)
2. The first indication that the battery is getting low will be the buzzer sounding flat
3. The second indication will be when the beacon stops flashing

Battery Charge

1. Check the battery charge terminal end is assembled correctly. See pic/digram
2. Remove the Aluminium cover plate – 4 x Screws
3. Disconnect the connection plugs from battery to post
4. Remove the Battery and mounting plate – 1 x screw
5. Charger light will initially show white/clear while reading the battery. Then will go a shade of red depending on charge level
6. General advice is to charge overnight until light shows green
7. Reverse steps above to reconnect

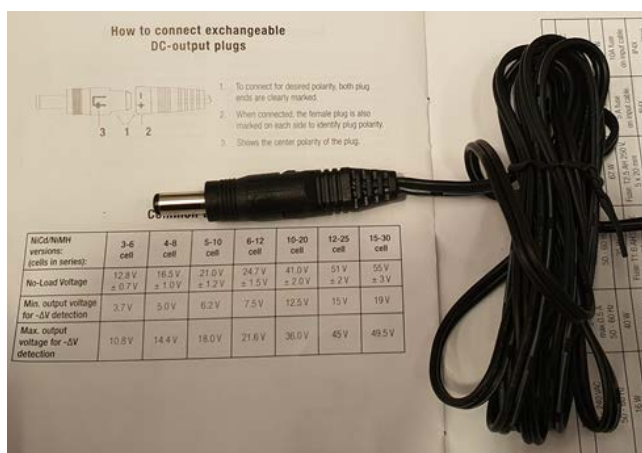

1. Check the battery charge terminal end is assembled correctly



2. Remove the Aluminium cover plate – 4 x Screws



3. Disconnect the connection plugs from battery to post