



PedSafe® Pause Gate

WALKWAY ACCESS

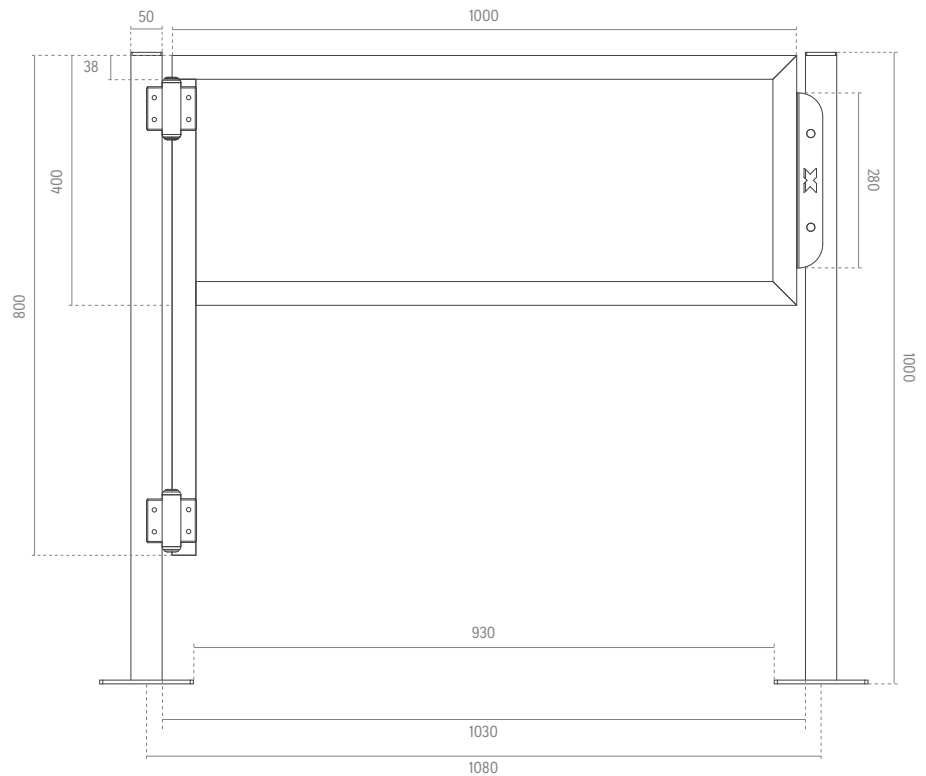

- **Height:** 400mm
- **Available Widths:** 800mm, 1000mm (standard) and 1200mm
- **Finish:** Galvanised with yellow powdercoat finish
- **Material:** Steel
- **Post Uprights:** 50 x 50mm
- **Base Plate:** 150 x 150mm square, 5mm thick, 4 x Ø13mm anchor holes
- **Fixings:** M10 x 60mm concrete screws (4 per post, supplied)
- **Slam Plate:** 3mm steel with rubber stops; reversible for left and right hanging
- **Hinge Type:** Self-closing with adjustable tension
- **Hinge Material:** Plastic with stainless springs
- **Caps:** Black plastic.

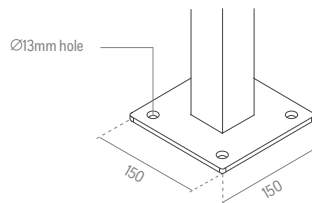

OPTIONS

Code	Description	Height (mm)	Width (mm)	Finish
3330-046	Self-Close Gate with Slam Plate	400	800	Galv/Yellow
3330-044		400	1000	Galv/Yellow
3330-045		400	1200	Galv/Yellow
3320-065	PedSafe Post (incl. Post 3220-011, Cap 3320-063 and 4 x Fixing 1911-054)			

COMPONENTS

Code	Description	Size (mm)	Finish
3220-011	PedSafe Floor Post	1000(H)	Galv/Yellow
3330-031	PedSafe Pause Gate Frame	1000(L)	Galv/Yellow
3320-063	PedSafe Post Cap, 50 x 50mm for 2.5mm Wall		Black, Plastic
3320-061	PedSafe Rail End Cap		Black, Plastic
3330-033	PedSafe Self-Closing Gate Hinge (Pair)		Black
3330-032	PedSafe Rubber Pad for Slam Plate		Black
3330-035	Push/Pull Labels for PedSafe Gate		
	Fixings		
3320-062	Tek-screw, 14g x 25mm (Fine thread)		
1911-054	M10 x 60mm Concrete Screw, Galv		


[VIEW ONLINE](#)

How to Install PedSafe® Gates

APPLIES TO PAUSE GATE




▲ Screw the top hinge first to the post




▲ Then attach and place the gate



▲ Line up closer plate

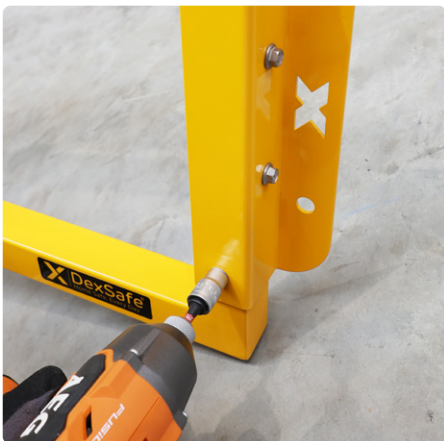

▲ Secure closer plate

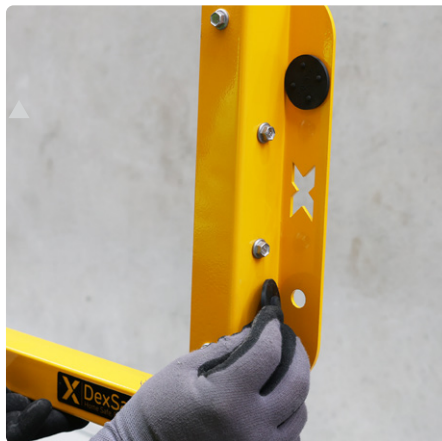

▲ Insert rubber pads into the closer plate




▲ Adjust hinge tension


- ➔ Post set-out for the PedSafe 1000mm wide gates is 1090mm c/c posts.
- ➔ Screw the top hinge first to the post, then attach and place the gate. Make sure the gate has a slight 2-3 degree lift across it as it will settle a bit over the next week or so.
- ➔ Secure bottom hinge to post and gate
- ➔ Screw on the closer plate to the gate with the screws provided.
- ➔ Adjust the hinge for closing speed with the small adjusters on the bottom of the hinge.

Footing Details for Barrier Installation on Asphalt

FOR FORKSAFE BARRIERS

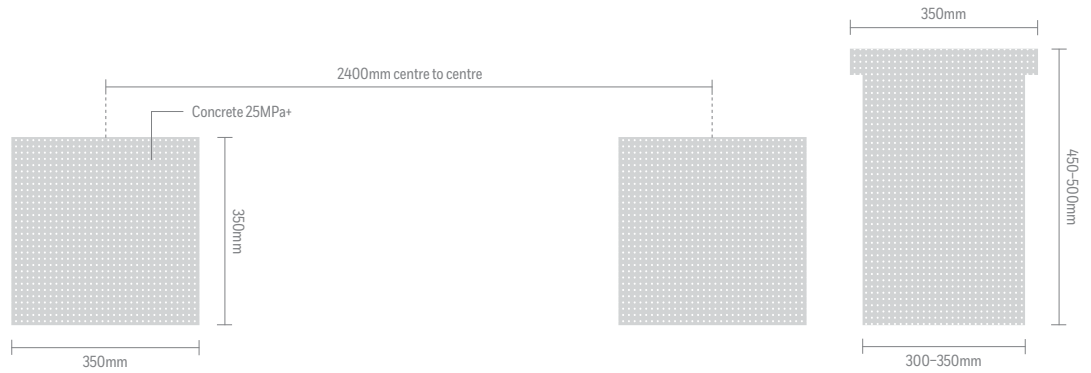

FOR PEDSAFE HANDRAIL

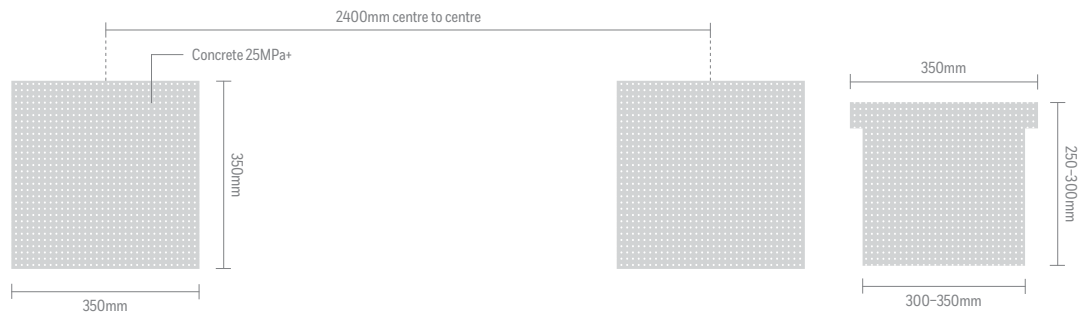

FOR PEDSAFE GATES

